
# BODYCRAFT

## **Jones Club Machine**

**Owners Manual** 



Record your Product Registration Info here:
Serial Number:
Purchase Date:
Dealer Name:
Register your product at www.bodycraft.com Click the link at the top of the page.

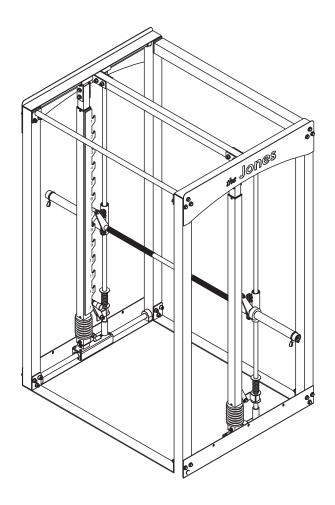



514


#### **BEFORE YOU BEGIN**


Congratulations and thank you for selecting the JONES CLUB strength training system. The JONES CLUB offers an impressive array of strength training exercises to develop every major muscle group of the body. Whether your goal is cardiovascular fitness, a shapely, toned body or dramatic muscle size and strength, the JONES MACHINE COMMERCIAL will help you achieve the specific results you want. For your safety and benefit, read this manual and the accompanying literature before using the JONES MACHINE COMMERCIAL. Keep this manual for future reference. If you have additional questions, please call your local dealer or our customer service department at 800-990-5556 Monday through Friday, 9 a.m. until 5 p.m. Eastern Time.

#### IMPORTANT SAFETY NOTES

There is a risk assumed by individuals who use this type of equipment. Before beginning this or any other exercise program consult your physician. This is especially important for individuals over the age of 35 or persons with pre-existing health problems. Recreation Supply, Inc. assumes no responsibility for personal injury or property damage sustained by or through use of this product.

- 1. This product must be assembled on a flat, level surface to assure its proper function.
- 2. Clean pads and frame on a regular basis. We recommend warm, soapy water. Do not use harsh or abrasive chemicals.
- 3. Inspect and tighten all parts before every use. Replace any worn parts immediately. Failure to do so may result in serious injury.
- 4. Keep children away from the JONES MACHINE COMMERCIAL at all times.
- 5. Keep your hands away from moving parts other than the designated handles.
- 6. Exercise with care to avoid injury.
- 7. If lubrication is needed, apply MP NO 2.5 Lithium Grease to Vertical Guide Rod (12), Base Bearing Rod (13) and Top Bearin Rod (14).
- If unsure about the proper use of the JONES MACHINE
   COMMERCIAL strength training system call your local dealer or our customer service department at 800-990-5556.

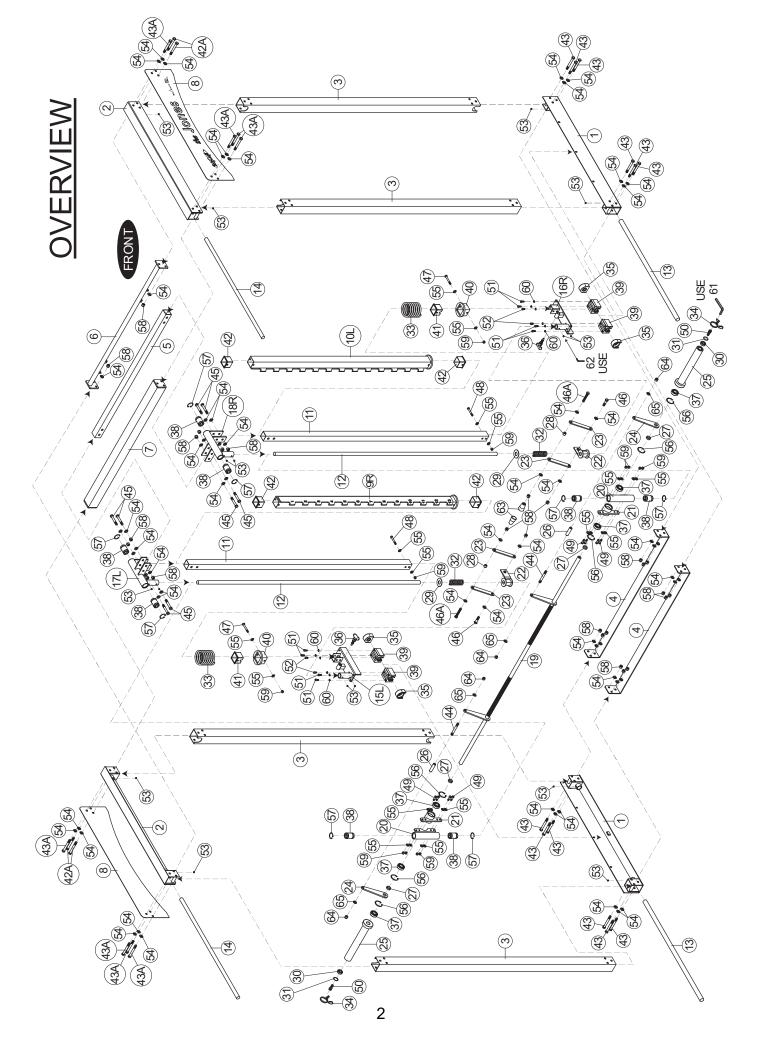


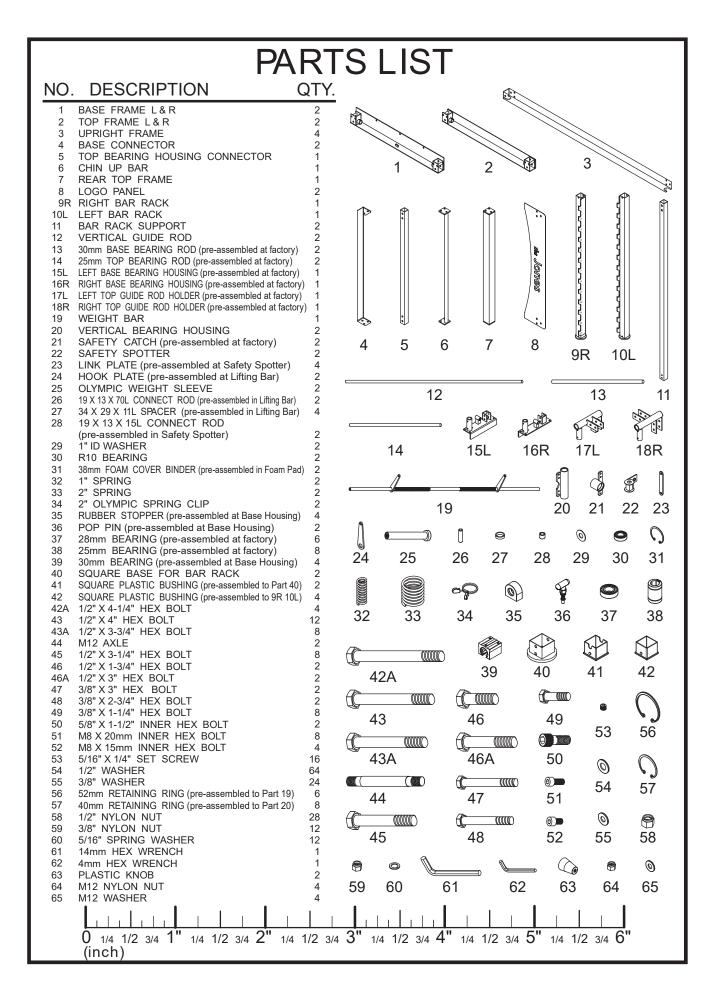


# STEP 1 Base Frame Assembly

#### **IMPORTANT:**


- Assembly requires two people.
- To ease the assembly process, do not tighten bolts until instructed.
- · Assemble on a flat, level floor.
- 1. Slide an Upright Frame (3) onto each end of the Left and Right Base Frame (1) and attach the two Base Connectors (4) using three 1/2" X 4" Hex Bolts (43), six 1/2" Washers (54) and three 1/2" Nylon Nuts (58) at each corner.

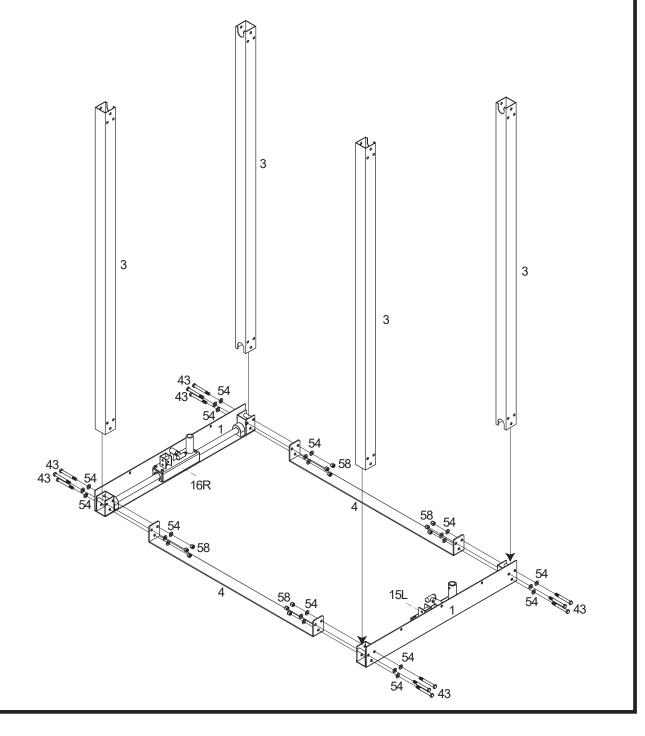

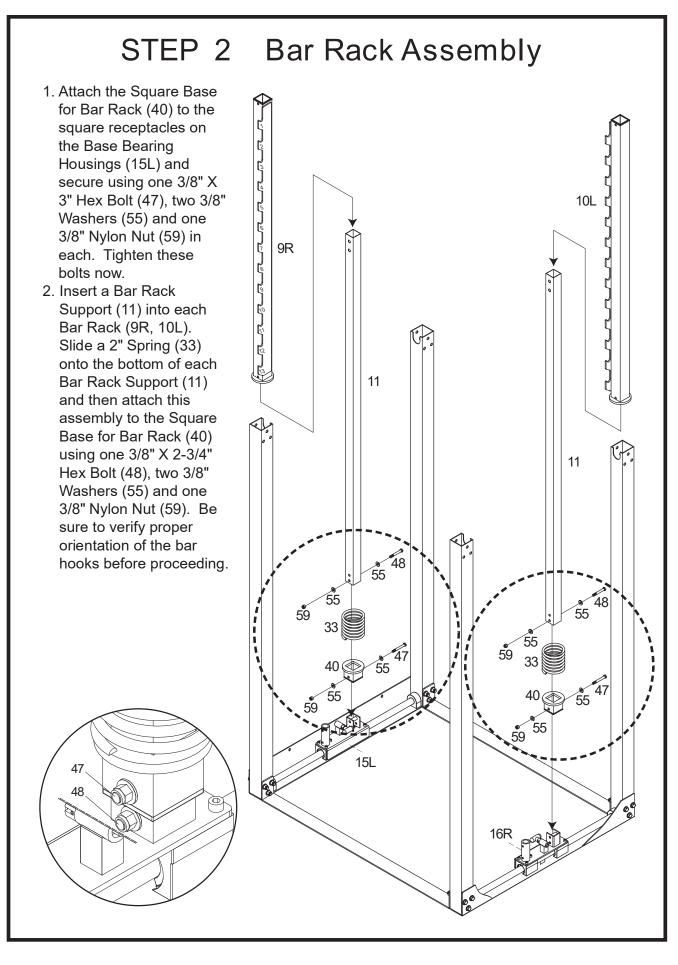


# STEP 3 Guide Rod Assembly

1. Loosen the 5/16" X 1/4" Set Screws (53) on the ringlet welded to the Base Bearing Housings (15L, 16R) and insert the two Vertical Guide Rods (12). Slide the Safety Spotter (22), then the 1" Spring (32), then the 1" ID Big Washer (29) and finally, the Vertical Bearing Housing (20) over the top of Vertical Guide Rod (12) as shown. Make sure the Handle of the Safety Spotter (22) is oriented toward the inside of the machine (as shown in A and B).

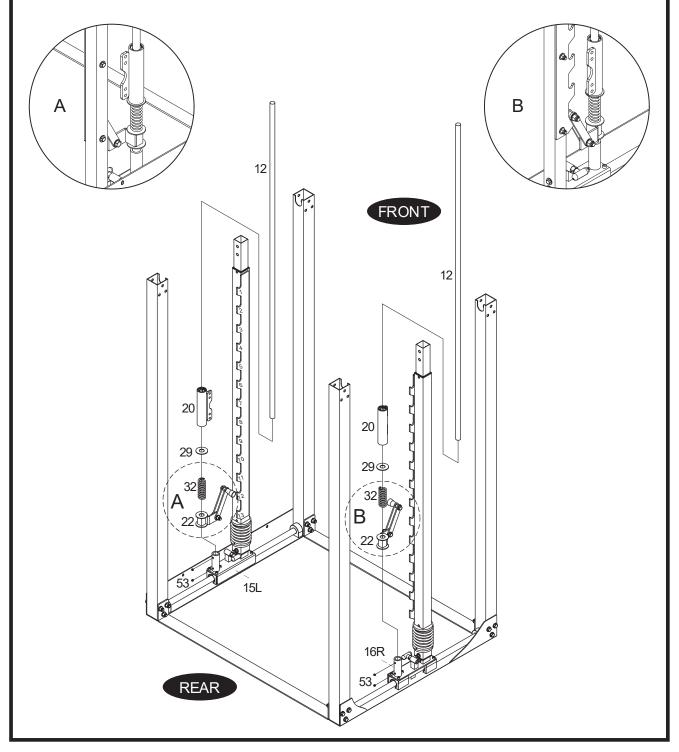

## STEP 4 Chin Up Bar and Rear Top Frame Assembly


- Loosen the 5/16" X 1/4" Set Screws (53) on the ringlet welded to the Top Guide Rod Holders (17L, 18R). Slide one Top Frame (2) over the top of the Vertical Guide Rod (12), and Upright Frame (3). Secure the Top Frame (2) to the Top Bearing Housing (17L, 18R) using two 1/2" X 3-1/4" Hex Bolts (45), four 1/2" Washers (54) and two 1/2" Nylon Nuts (58). Repeat for the other side.
- 2. Attach the Chin Up Bar (6), Rear Top Frame (7) and the two Logo Panels (8) to the Top Frames (2), using four 1/2" X 4-1/4" Hex Bolts (42A), eight 1/2" X 3-3/4" Hex Bolt (43A), sixteen 1/2" Washers (54) and four 1/2" Nylon Nuts (58).

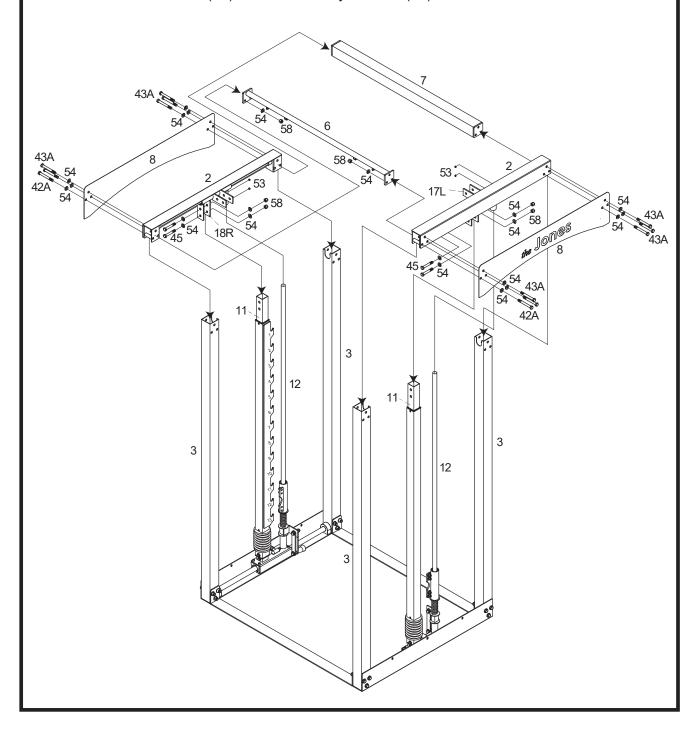

## STEP 5 Weight Bar Assembly

- 1. Attach the Weight Bar (19) to the Vertical Bearing Housing (20), using two 3/8" X 1-1/4" Hex Bolts (49), four 3/8" Washers (55) and two 3/8" Nylon Nuts (59).
- 2. Slide the Olympic Weight Sleeve (25) onto each side of the Weight Bar (19) and secure with a 5/8" X 1-1/2" Inner Hex Bolt (50). Use the 2" Olympic Spring Clip (34) to hold weights in place during use.
- 3. Attach the Top Bearing Housing Connector (5) to the Right and Left Top Guide Rod Holders (17L & 18R) using two 1/2" X 3-1/4" Hex Bolts (45), four 1/2" Washers (54) and two 1/2" Nylon Nuts (58).

Tighten all bolts. Start at Base and work toward top. If horizontal movement is not completely smooth, try loosening the Allen Bolts on the Bearing Housing that hold the bearings in place, and then re-tighten. The bearings will seat onto the guide rods.

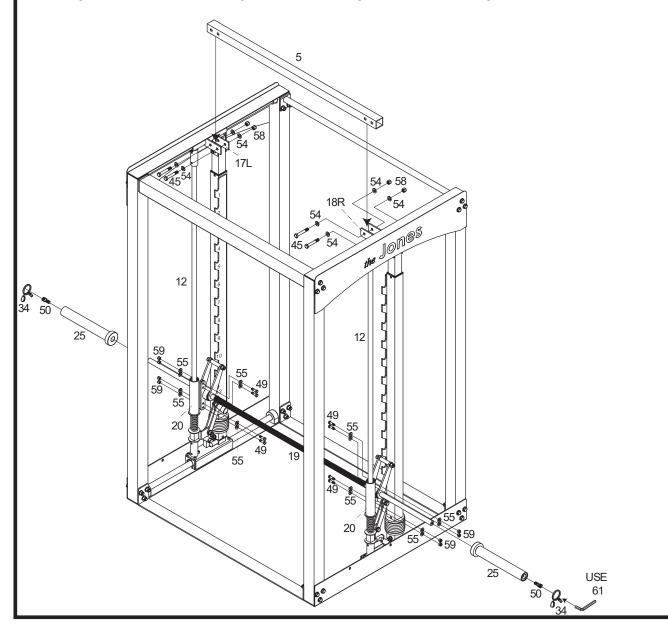

Assembly is complete! Please take the following steps before using the BODYCRAFT JONES MACHINE COMMERCIAL STRENGTH TRAINING SYSTEM:

# IMPORTANT TIPS FOR PROPERAND SAFE USE

- ALWAYS utilize the Safety Spotters. Faliure to do so can result in serious injury.
- Remember that the lifting bar is hooked into place by rotating the bar toward the chromed hooks.
- Be certain that both hooks are fully engaged before removing your hands from the lifting bar.
- Inspect the machine before every use. Do NOT use the machine if you find any irregularities.
- Be sure to register your warranty by submitting a completed warranty registration form.
- This product must be assembled on a flat, level surface to assure its proper function.
- If unsure about the proper use of the BodyCraft Jones Machine, call your local BodyCraft dealer or our customer service department at 800-990-5556.

### WEIGHT LIMITATIONS FOR THE LIFTING BARS

- . JB7PB 7' Long, 50 lb. Steel Power Bar, 1000 lb. Capacity.
- . JB7ABB 7' Long, 55 lb. Steel Power Bar, 1000 lb. Capacity.

Thank you for purchasing the Jones Club Machine. If you have any questions, please call your local BodyCraft dealer or call our customer service department at 800-990-5556.



800.990.5556 SERVICE@BODYCRAFT.COM WWW.BODYCRAFT.COM



BODYCRAFT 7699 GREEN MEADOWS DR. LEWIS CENTER, OHIO 43035